
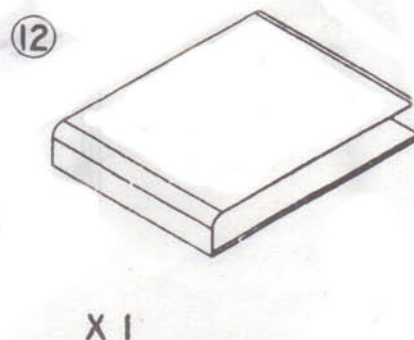
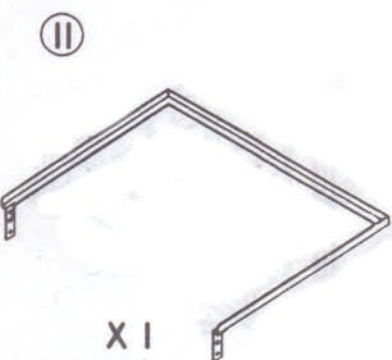
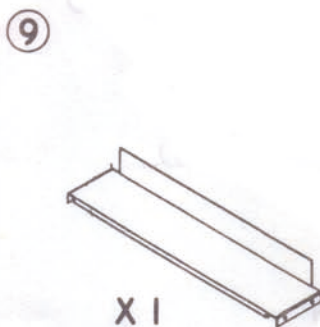
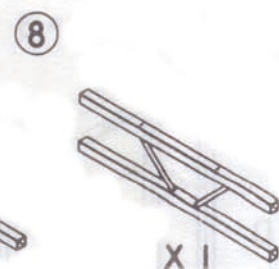
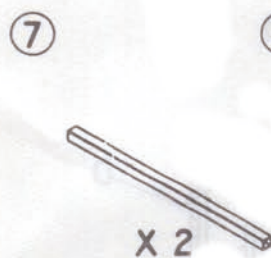
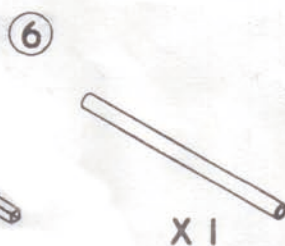
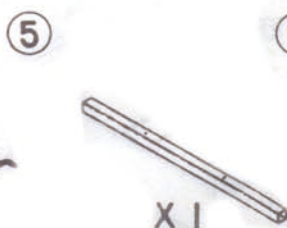
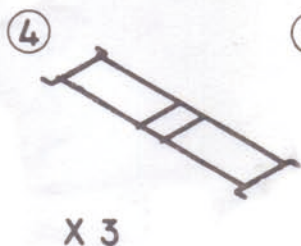
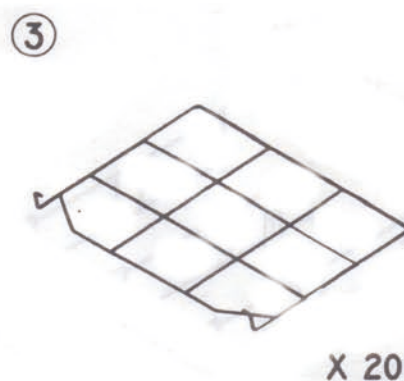
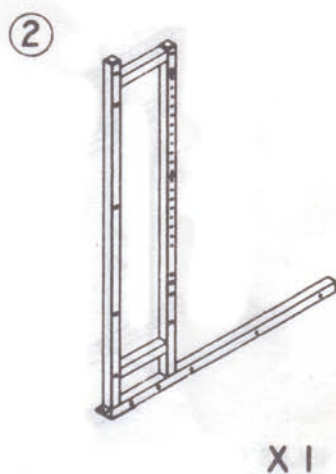


MODEL: DRYING RACK

- 1 -


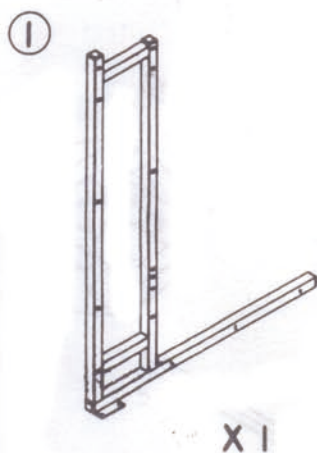


A	B
X 2	X 2
C	D
X 18	X 12
E	F
X 8	X 10
G	H
X 2	X
I	J
X 6	X 4
K	
X 40	


MODEL: DRYING RACK

- 2 -


STEP 1 FINGER TIGHTEN ALL BOLTS ,
LET THEM REMAIN LOOSE TO ALLOW
FOR SOME ADJUSTMENT DURING ASSEMBLY

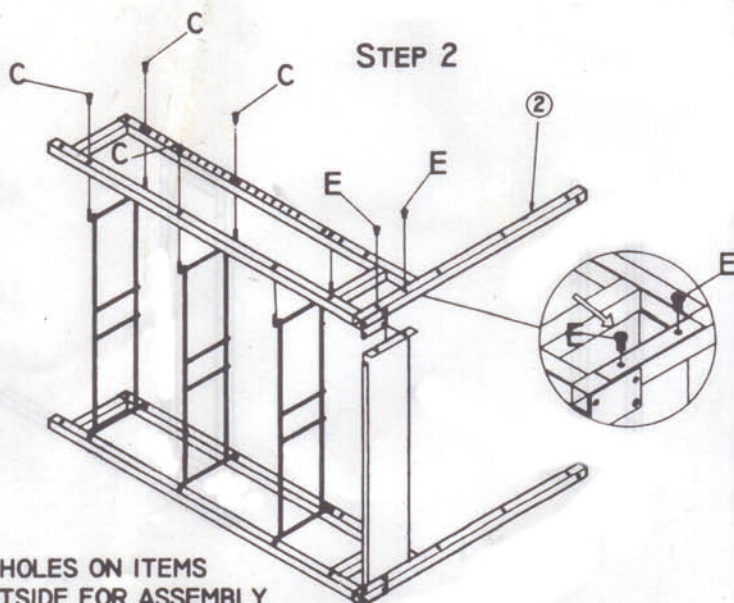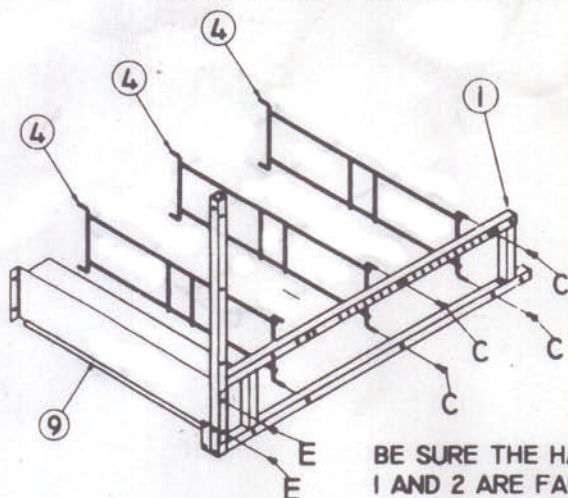


BE SURE THE HANGING HOLES ON ITEMS
1 AND 2 ARE FACING OUTSIDE FOR ASSEMBLY

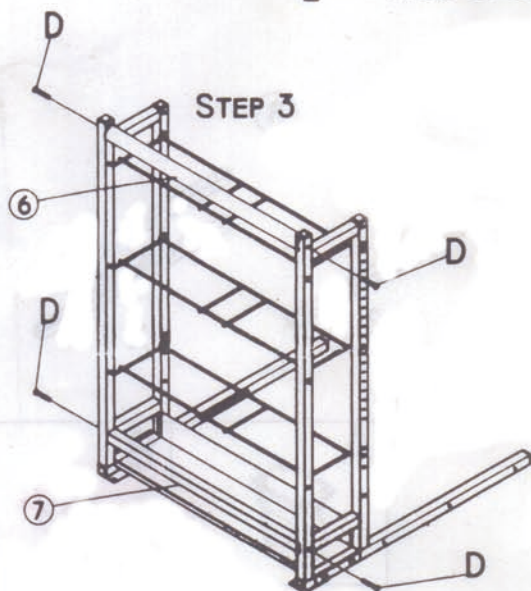

STEP 4

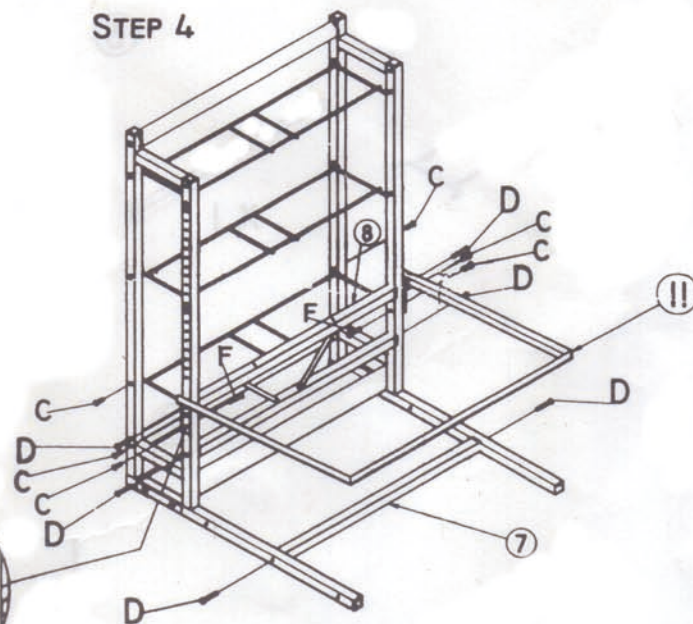


STEP 5

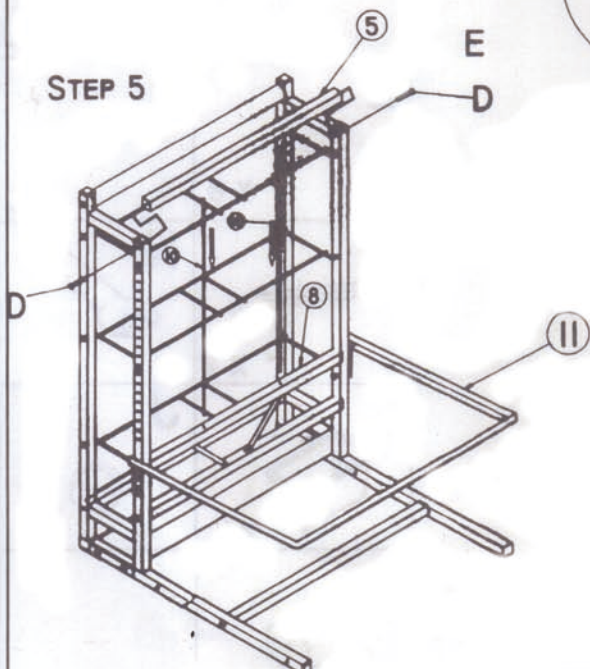

STEP 6


YOU MAY NOW TIGHTEN ALL
BOLTS TO SECURE THE CART,
DO NOT "OVER-TIGHTEN"

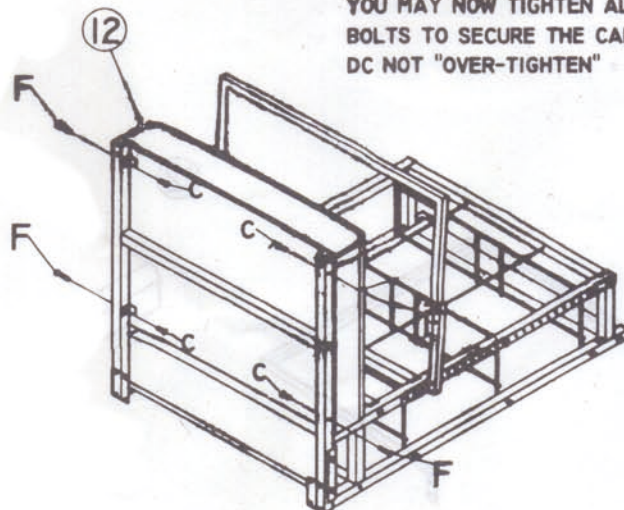


MODEL: DRYING RACK

- 3


STEP 7

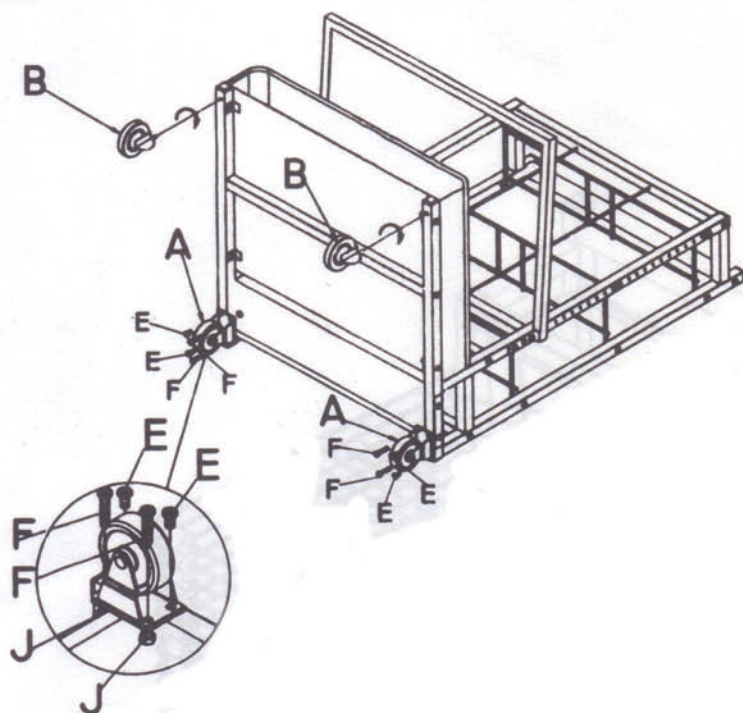

STEP 8

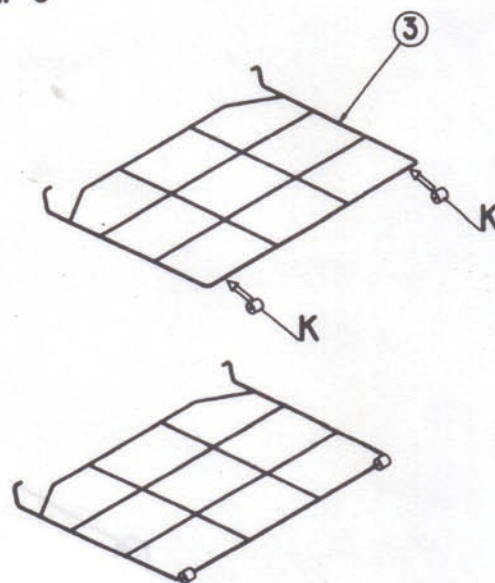

STEP 9

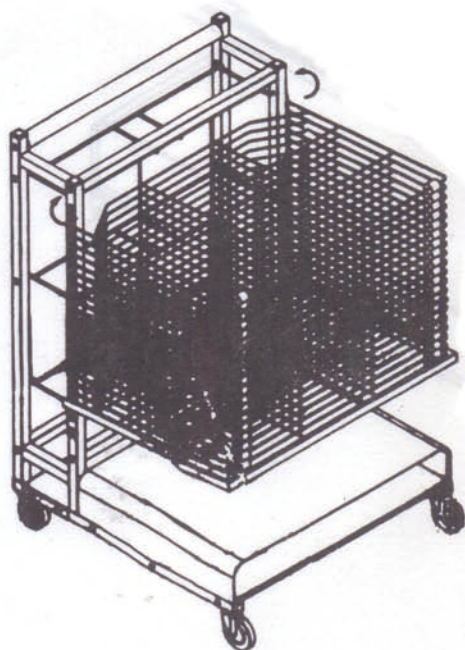

STEP 10

